

User Manual







UVLT150

UV-AB Light Meter



CONTENTS

1.	Introduction	1
2.	Accessories	1
3.	Safety Precaution	2
4.	Instrument Description	3
4.1.	LCD display ... Error! Bookmark not defined.	
4.2.	Buttons:.....	3
5.	General Specifications:.....	4
6.	Electrical Specifications	4
7.	Operation	5
7.1.	Power button.....	5
7.2.	 Button	5
7.3.	 Button	5
7.4.	 button	5
7.5.	 Data hold button.....	5
8.	Maintenance or Repair	6
9.	Battery Replacement	7
10.	Product Disposal	7

1. Introduction

Please, read the operating instructions in detail before you use this UVAB optics meter, so you will operate the meter correctly. This meter can be used in industry and home.



Application:

- Monitoring blue light radiation hazards in welding.
- UV sterilization.
- Graphic arts.
- Photochemical matching.
- UV EPROM erasure.
- Photos resist exposure.
- Curing of inks, adhesives, and coatings.
- Convenient, no need to adjust, data displayed clearly.
- Weathering "degradation studies".
- UV sterilization.
- Virology.
- Microbial genetics.
- DNA research.
- Biologic hoods.
- General laboratory use.

2. Accessories

- | | |
|---|------------------------------------|
| 1 | Meter |
| 1 | Carrying case |
| 1 | User's Manual |
| 2 | Battery 1.5V(AAA MN2400 LR03 AM4) |


3. Safety Precaution

	Caution! Please refer to this manual. Improper use may damage the meter and its components.
	Complies with European Directive.


- Do not operate in environments with flammable gas or humid environments.
- Operating altitude: up to 2000M.
- Operating environment: Indoor use; Pollution degree 2.
- Clean with soft cloth when dirty, such as glasses cloth. Do not clean with chemicals and other solvents.
- EMC: EN61326-1:CISPR 11:Group 1, Class B
- ✧ Class B – Equipment for use in all establishments other than domestic.
- ✧ Group 1 – RF energy generated is needed for internal functioning.

4. Instrument Description

4.1. LCD DISPLAY

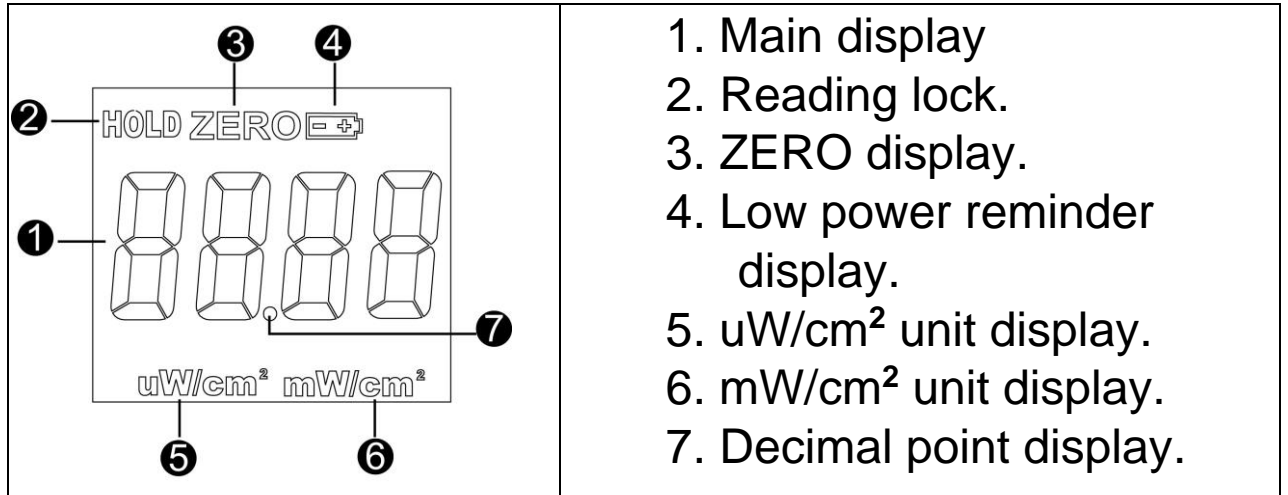

4.2. Buttons:

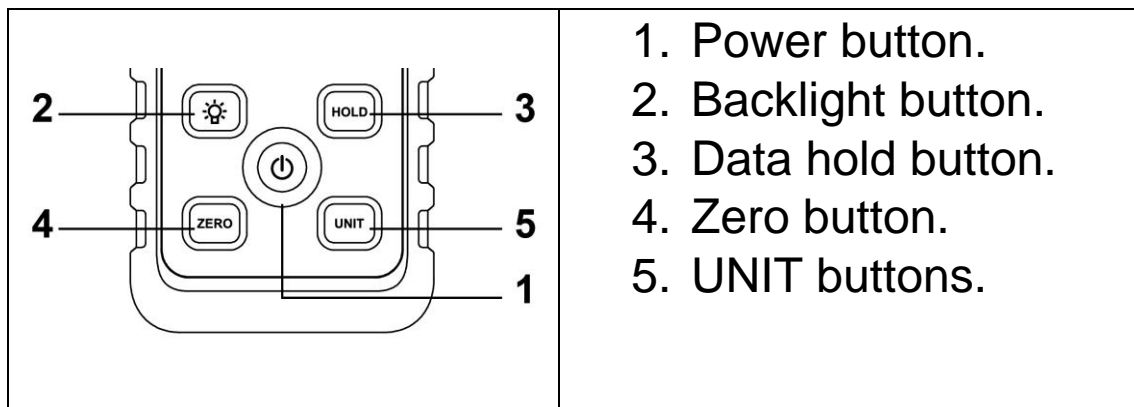

5. General Specifications:

- Zero function.
- 1 μ W/cm² or 1.00mW/cm² unit selection.
- Data hold.
- Back light: it will turn off automatically after turned on for 15 seconds .
- Low battery indication
- Overload display: "OL".
- Low battery indication "☹️":
- Auto power off after 15 minutes.
- Operating : Temperature 5 °C ~40 °C , below 80%RH.
- Storage temp. & RH : -10 °C ~60 °C , below 70%RH.
- Sensor: UV light sensor.

6. Electrical Specifications


DISPLAY	3-3/4 digits LCD with maximum reading 3999
Measuring range	3999 μ W/cm ² , 39.99mW/cm ²
Resolution	1 μ w/cm ² ,0.01mW/cm ²
Accuracy	± 4 (%FS + 2dgt) FS: full scale 15%:sunlight ultraviolet.
Spectrum Range	290~390nm
Calibration Point	365nm
Sample Time	Approx. 3 sec.
Power Supply	2 batteries 1.5V
Battery life	approx. 50 hr.
Weight	approx. 90g..
Size	133(L) x 48(W) x 23 (H)mm

7. Operation

7.1. Power button

Press the “” button to turn ON or turn off.

7.2. Button


Press the “” button for the zero adjustment if any digits are appearing. When the lid of the light receiving part is not opened, if it is found that it is not zeroed

7.3. Button


Press “” key backlight light on.

Backlight light turns off automatically after 15 seconds.


7.4. button

Press the “” button to switch from $\mu\text{W}/\text{cm}^2$ to mW/cm^2 .

7.5. Data hold button


Press  to enable or disable the data hold function.

8. Maintenance or Repair


1. When the When “” symbol is displayed on the LCD, it means that there is insufficient power; please change the battery immediately to ensure its accuracy.
2. Do not place the meter in locations that have high temperature, humidity or that are exposed to direct sunlight.
3. Remember to turn off the power after usage; remove the battery if not used for a long period of time in order to prevent battery leakage and causing damages to internal components.
4. When the instrument failure, only by the authorized service provider or return the original repair.

9. Battery Replacement

1. Turn off the power.
2. Open the battery cover at the back of the meter, remove the batteries.
3. Please insert new 1.5V x 2 batteries according to the polarities.
4. Put the battery cover back in place.

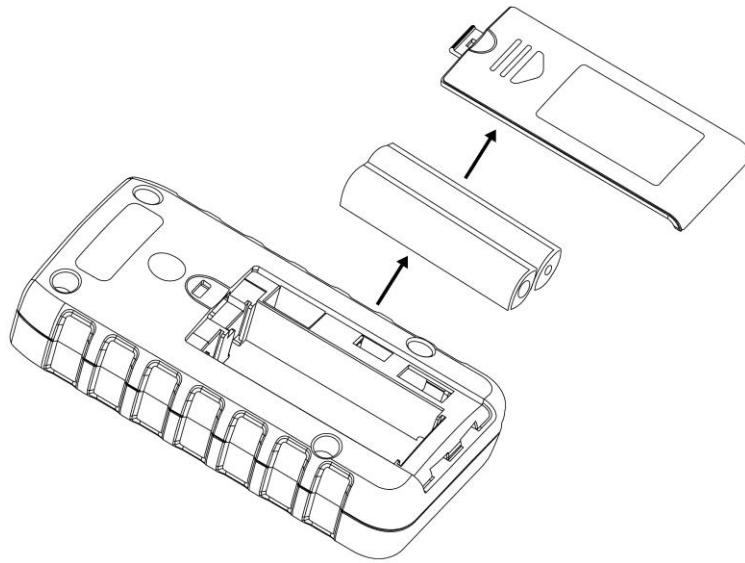

10. Product Disposal

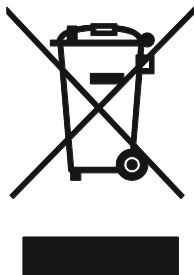

Note: This symbol indicates that the meter and its accessories must be separated and processed properly.

Warranty

Triplett / Jewell Instruments extends the following warranty to the original purchaser of these goods for use. Triplett warrants to the original purchaser for use that the products sold by it will be free from defects in workmanship and material for a period of (1) one year from the date of purchase. This warranty does not apply to any of our products which have been repaired or altered by unauthorized persons in any way or purchased from unauthorized distributors so as, in our sole judgment, to injure their stability or reliability, or which have been subject to misuse, abuse, misapplication, negligence, accident or which have had the serial numbers altered, defaced, or removed. Accessories, including batteries are not covered by this warranty.

**Copyright © 2023 Triplett
www.triplett.com**