

Instructions to install USB driver

For Windows XP/ Vista2

For Windows 7/8/105

For Windows XP/Vista

Driver CP210xVCPInstaller_x64.exe or CP210xVCPInstaller_x86.exe supports Windows XP and Windows Vista.


Follow the instructions below to install USB driver.

A. After run the CD ROM, click “[USB Driver Installation](#)” then “[For Windows XP/Vista](#)” to start the installation.


B. In the installation box, click “**Next**” to continue.




C. Check “**I accept this agreement**” and click “**Next**”.

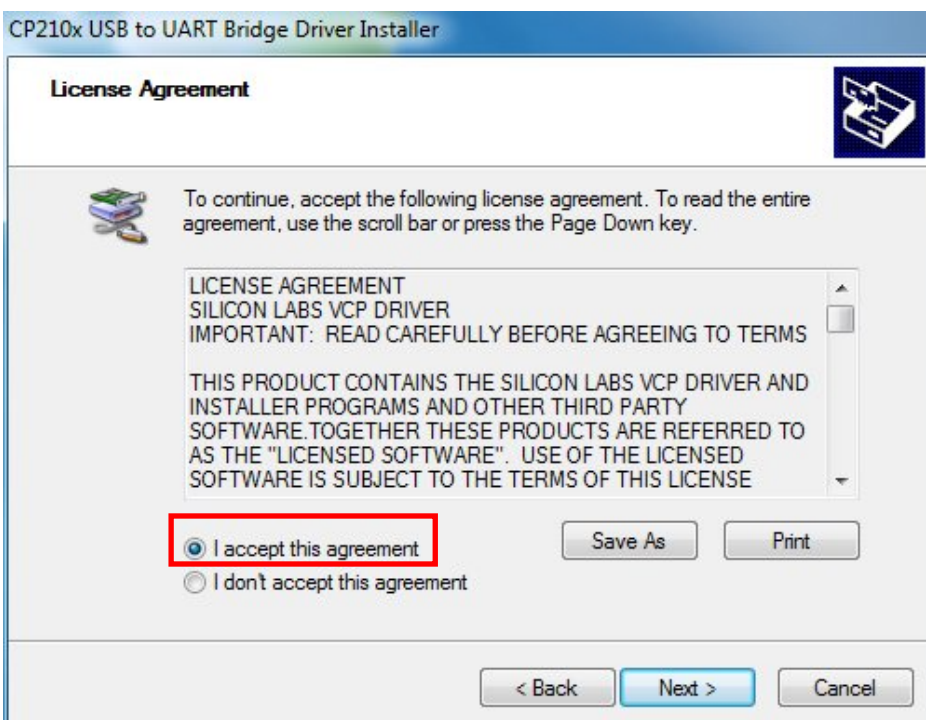

D. The Set up status

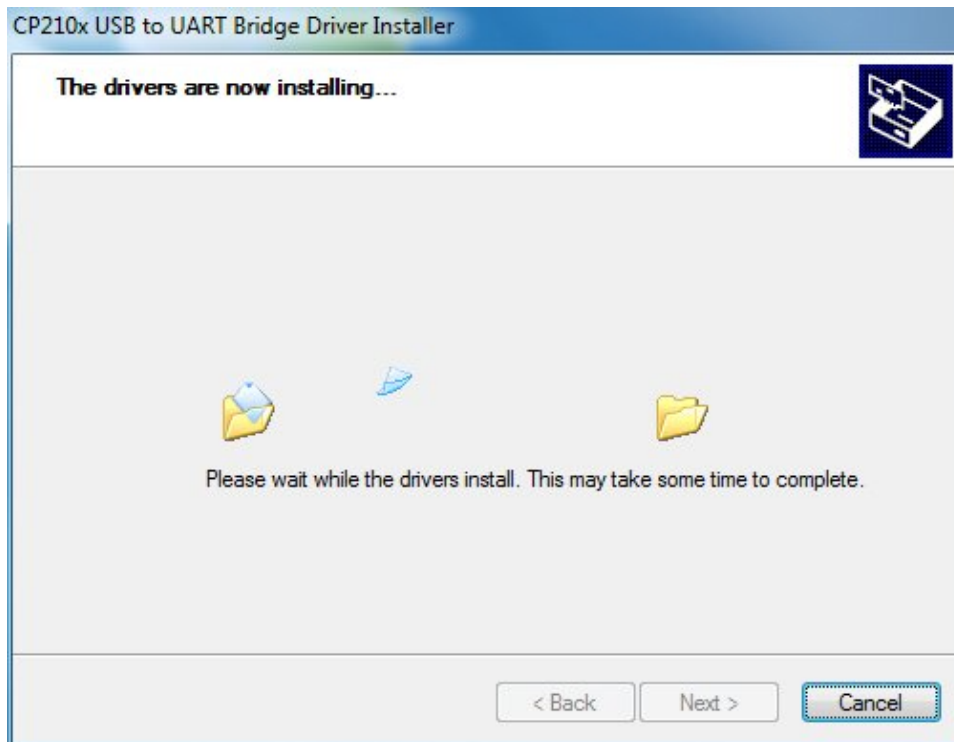

E. Click “**Finish**” to begin the installation.

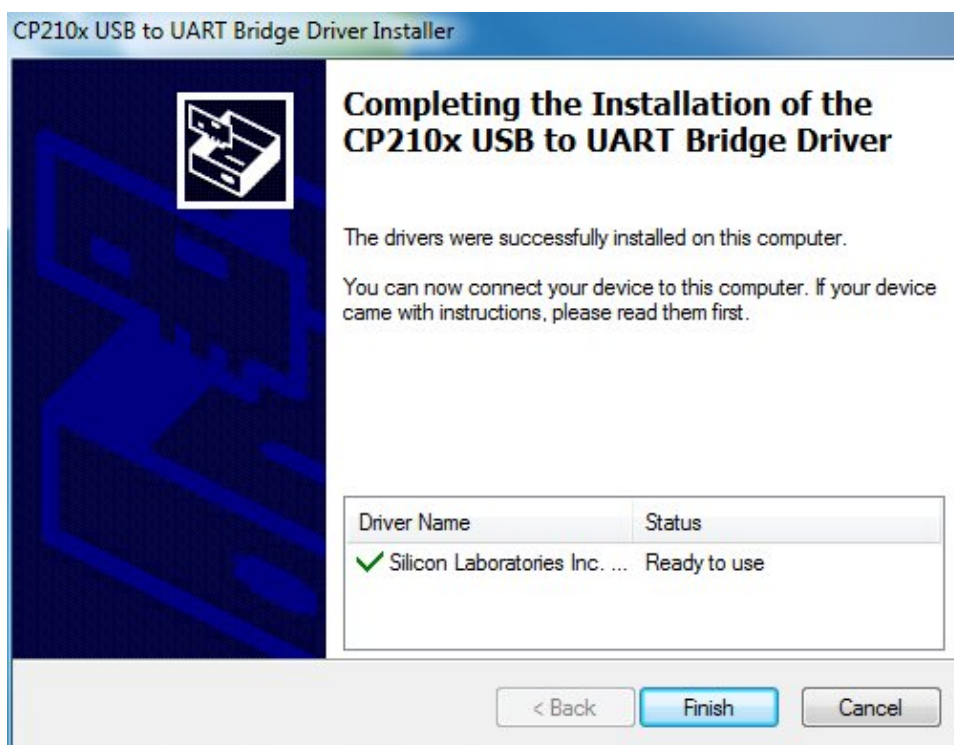

F. Restart your computer after installation.


G. The installation is completed after restarting your computer.

H. Connect the USB Cable (see *Note*) to your computer and it will detect the USB device and update the driver automatically.

To make sure the driver is updated, right click “**My Computer**” and click “**Content**”.

In hardware content, click “**Device Manager**” to check “Silicon Labs CP210x USB to UART Bridge (COM Port No.)” is listed under Ports (COM & LPT) as below.

If yes, the software update is completed and can be used for data transmission.

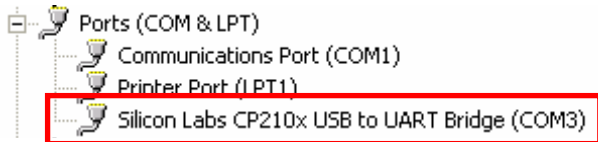

※ *Note:* The USB Cable here refers to VZUSBAZD(2.5ψ) or VZUSBAZM/P(3.5ψ).

For Windows 7/8/10


Driver CP210xVCPInstaller_x64.exe or CP210xVCPInstaller_x86.exe supports Windows 7/8/10.

Follow the instructions below to install USB driver.


- A. After run the CD ROM, click “[USB Driver Installation](#)” then “[For Windows 7/8/10](#)” to start the installation.
- B. In the installation box, click “**Next**” to continue.




- C. Check “**I accept this agreement**” and click “**Next**”.

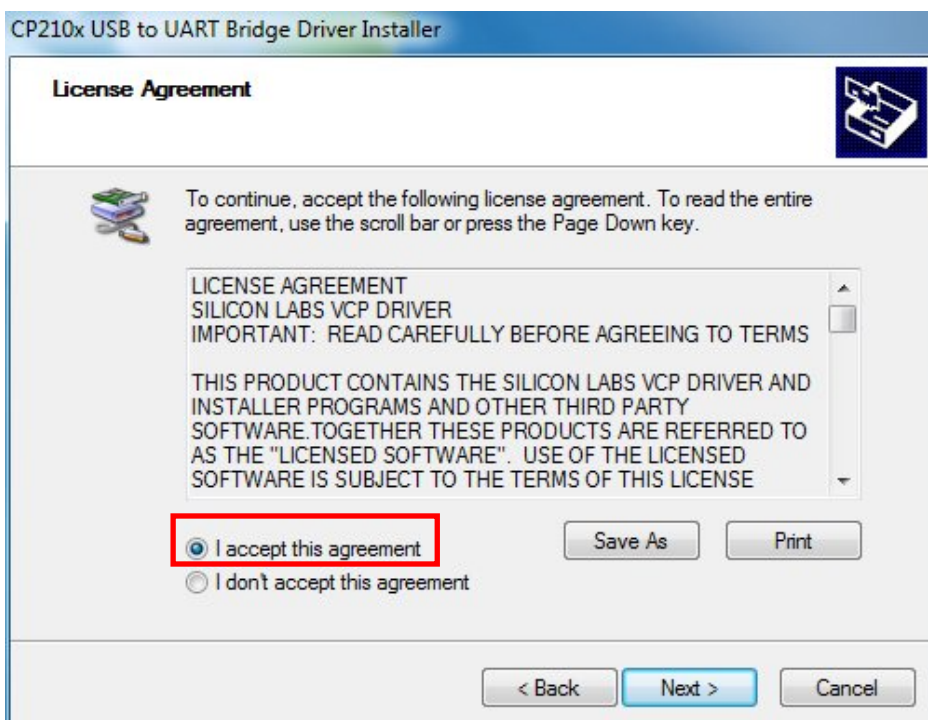

D. The Set up status

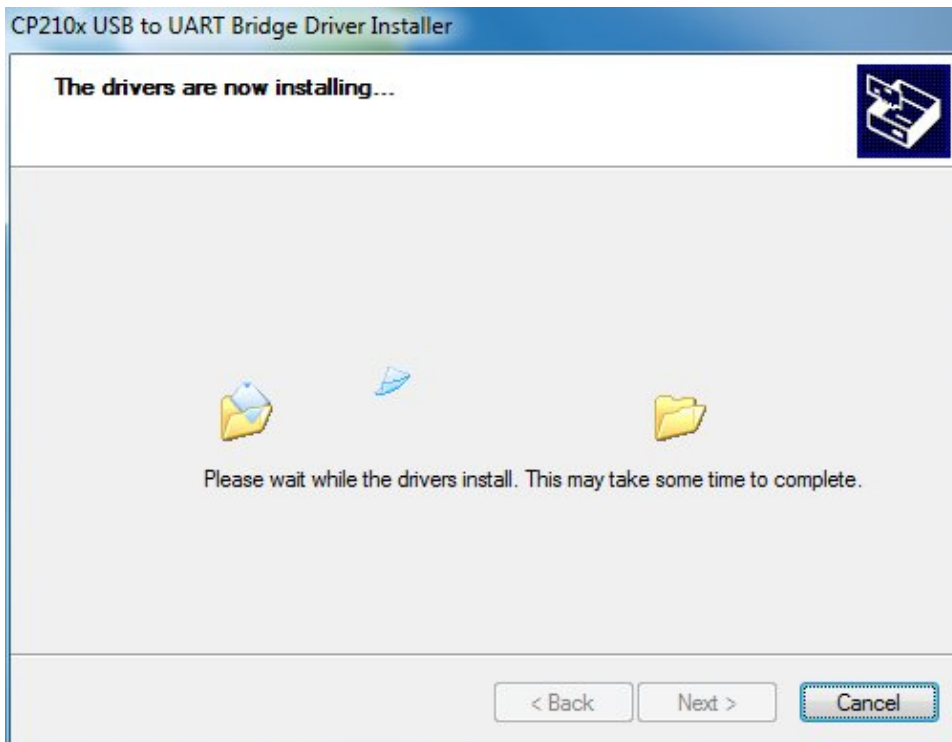

E. Click “**Finish**” to begin the installation.

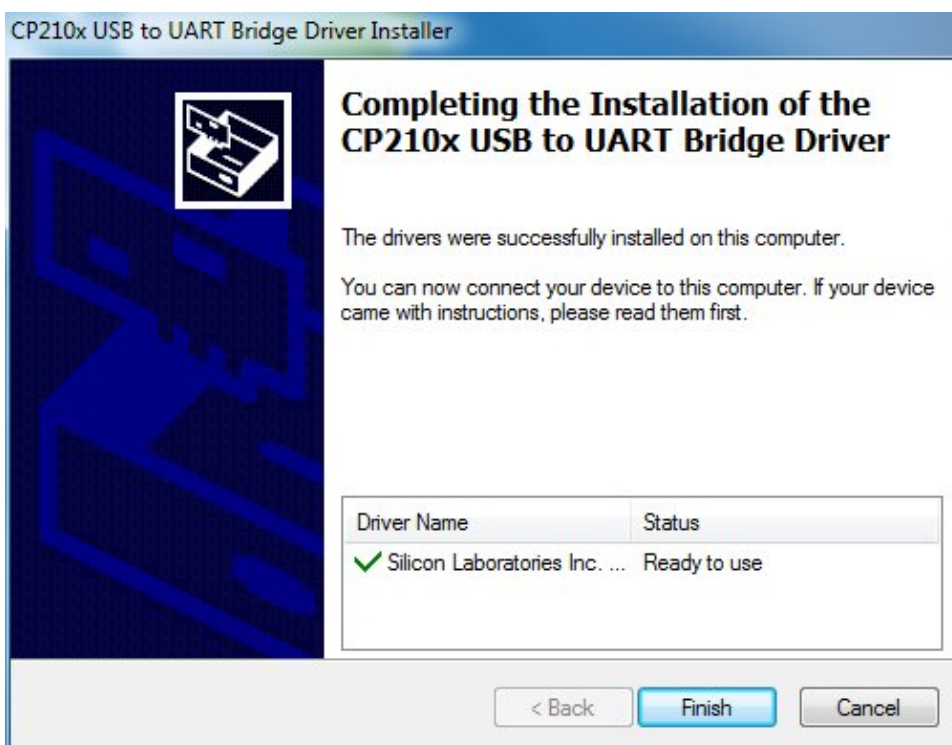

F. Restart your computer after installation.


G. The installation is completed after restarting your computer.

H. Connect the USB Cable (see *Note*) to your computer and it will detect the USB device and update the driver automatically.

To make sure the driver is updated, right click “**My Computer**” and click “**Content**”.

In hardware content, click “**Device Manager**” to check “Silicon Labs CP210x USB to UART Bridge (COM Port No.)” is listed under Ports (COM & LPT) as below.

If yes, the software update is completed and can be used for data transmission.

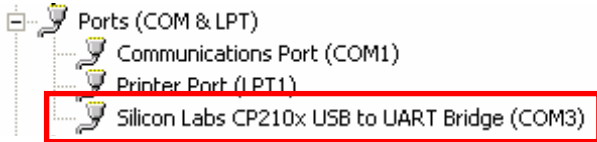

※ *Note:* The USB Cable here refers to VZUSBAZD(2.5ψ)or VZUSBAZM/P(3.5ψ).